


| PAGE | TITLE |
|------|---|
| 1 | CONTENTS |
| 2 | Fusebox Layouts - CEM, Engine Bay, Boot/Trunk and Underseat |
| 3 | Battery Power Distribution - Battery, Fuseboxes and Power Outlets |
| 4 | Ignition Switch - Including Starting and Charging |
| 5 | CEM Ignition Relays - ILR, INFO, CMFT |
| 6 | Relay Switched Outputs - Engine Bay Fusebox |
| 7 | Relay Switched Outputs - Boot/Trunk and Rear Underseat Fuseboxes |
| 8 | Ground Headers |
| 9 | Active Safety System - RCM Module-CN2 (30way) and CEM Connections |
| 10 | Active Safety System - RCM Module-CN1 (75way) -LHD and RHD variations |
| 11 | Locking and Security |
| 12 | Driver Visibility - Horn, Wipers, Washers, Rear View Mirror, Heated Rear Window |
| 13 | Exterior Lighting - Front |
| 14 | Exterior Lighting - Rear |
| 15 | Interior Lighting - Including Background Illumination |
| 16 | HVAC (Heating, Ventilation And Cooling) - Front and Rear |
| 17 | Front Seats - Driver and Passenger |
| 18 | Rear Seats - Left and Right |
| 19 | Front Doors - Driver and Passenger |
| 20 | Rear Doors - Left and Right |
| 21 | Infotainment - Standard Equipment |
| 22 | Infotainment - Optional Equipment and MOST Loop |
| 23 | Infotainment - Bang & Olufsen Audio |
| 24 | Vehicle Dynamics - Braking, Steering, Adaptive Damping & IVD |
| 25 | Vehicle Dynamics - Tyre Pressure Monitoring System & Parking Distance Aid |
| 26 | Body and Powertrain CAN Network |
| 27 | Vehicle Diagnostic Connectors |
| 28 | Engine Management - Power and Ground |
| 29 | Engine Management - Engine Bank A (including cooling fan pack) |
| 30 | Engine Management - Engine Bank B |
| 31 | Engine Management - Sensors, Exhaust Bypass & Cruise Control |
| 32 | Engine Management - Fuel System |
| 33 | Automatic Transmission |

WIRE LABELLING

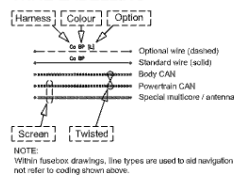


| Harness Code | |
|--------------|--|
| Ca | Cabin |
| Ca | Centre stack |
| DL | Door, Front, Left Hand Side |
| DR | Door, Front, Right Hand Side |
| DtL | Door, Rear, Left Hand Side |
| DrR | Door, Rear, Right Hand Side |
| En | Engine |
| Fa | Facia (instrument panel/dashboard) |
| Fw | Forward (located in engine bay) |
| L-Bf | Link-Bumper Front |
| L-Br | Link-Bumper Rear |
| L-Fan | Link-Fan Pack |
| L-Ft | Link-Fuel Tank |
| L-Kr | Link-Key Reader (PATS) |
| L-Ps | Link-Power Steering |
| L-Rs | Link-Rear Seat |
| R-tgl | Rear-Tailgate, fitted to LH or RH of vehicle |
| R-tgr | Transmission |


| Colour Code | |
|-------------|--------|
| B | Black |
| O | Orange |
| P | Purple |
| G | Green |
| N | Brown |
| K | Pink |
| Y | Yellow |
| R | Red |
| U | Blue |
| S | Slate |
| W | White |

| Option Code | |
|-------------|---|
| Blank | No Option Code - Fitted to ALL variants |
| (L) | Left Hand Drive (LHD) |
| (R) | Right Hand Drive (RHD) |
| (NRSE) | No Rear Seat Entertainment (RSE) |
| (RSE) | Rear Seat Entertainment (RSE) Fitted |

WIREBREAK SYMBOLS

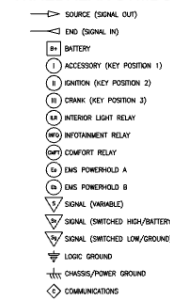

WIREBREAK LABELLING

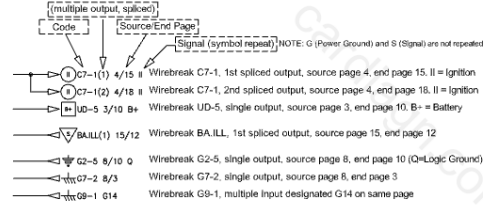


Key Code:
 A - Engine ECU A
 B - Engine ECU B
 C - CEM, Central Electronic Module, (8 connectors #: 1, 3, 5-10)
 E - EFB, Engine Bay Fusebox (10 connectors #: 1-10)
 T - TFB, Trunk/Boot Fusebox (4 connectors #: A, B, C, D)
 U - UFB, (Rear) Underseat Fusebox (4 connectors #: A, B, C, D)
 G - Ground, either an eyelet or header (Q signifies logic ground)



SPLICE LABELLING

Where a splice exists only in one location, the splice name and function ARE NOT shown.
 Where a splice exists in more than one location, the splice name and function ARE shown.

| | | | | | | |
|--|-----------|-------|--------|------------------|------------------|---|
| | EPSC Code | Prog | Rapide | TITLE | APL DRG No. | 1 |
| | 00.06.51 | Build | 2011MY | SUB-SYSTEM TITLE | ILBD43-14T400-AA | |

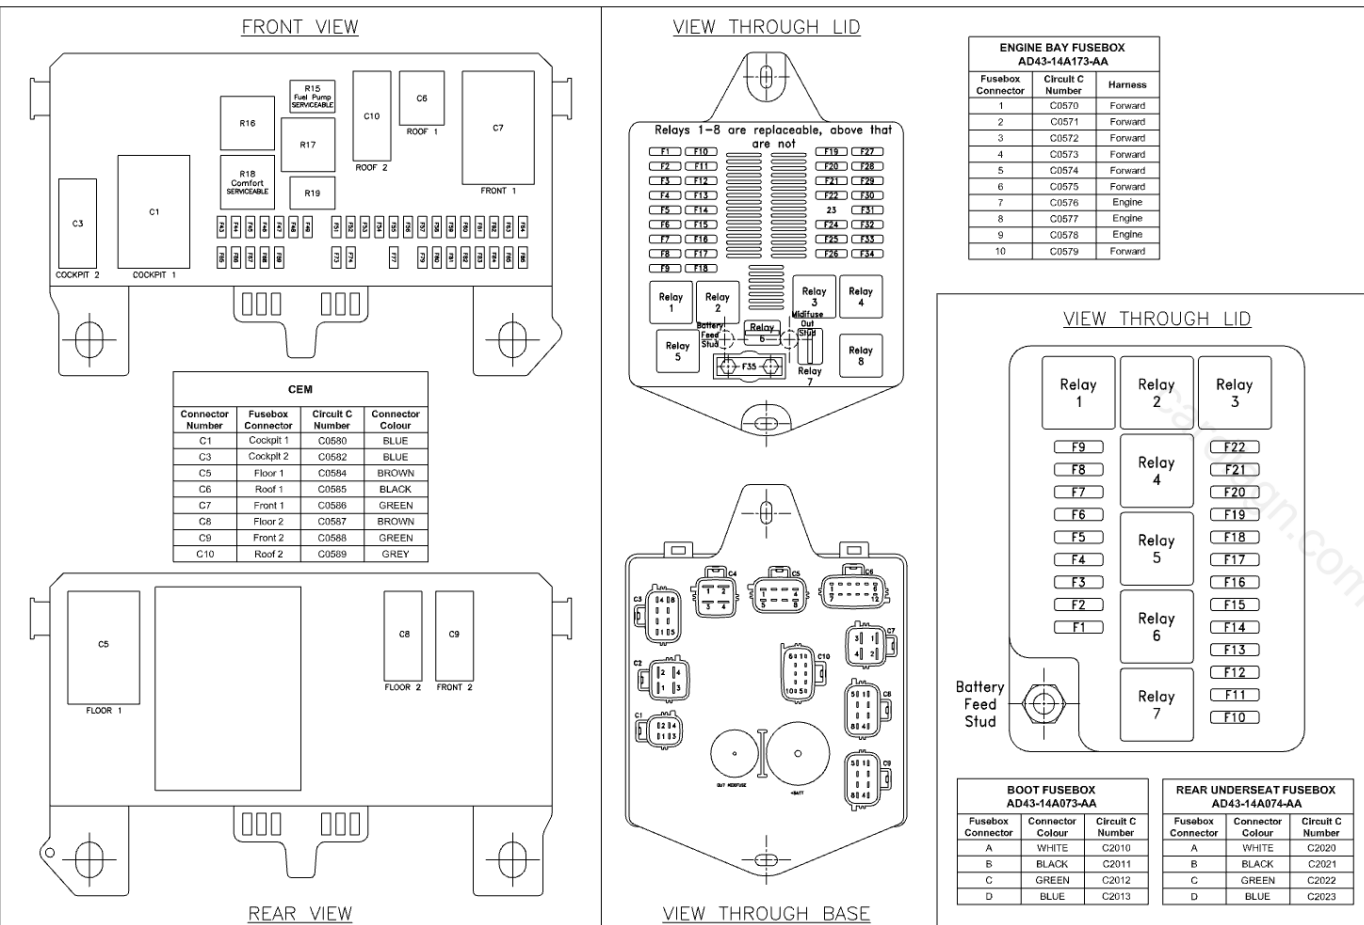


| | | | | | | |
|--|-----------|-------|--------|--|------------------|---|
| | EPSC Code | Prog | Rapide | TITLE | APL DRG No. | 2 |
| | 00.06.51 | Build | 2011MY | Fusebox Layouts CEM, Engine Bay, Boot/Trunk and Underseat | ILBD43-14T400-AA | |

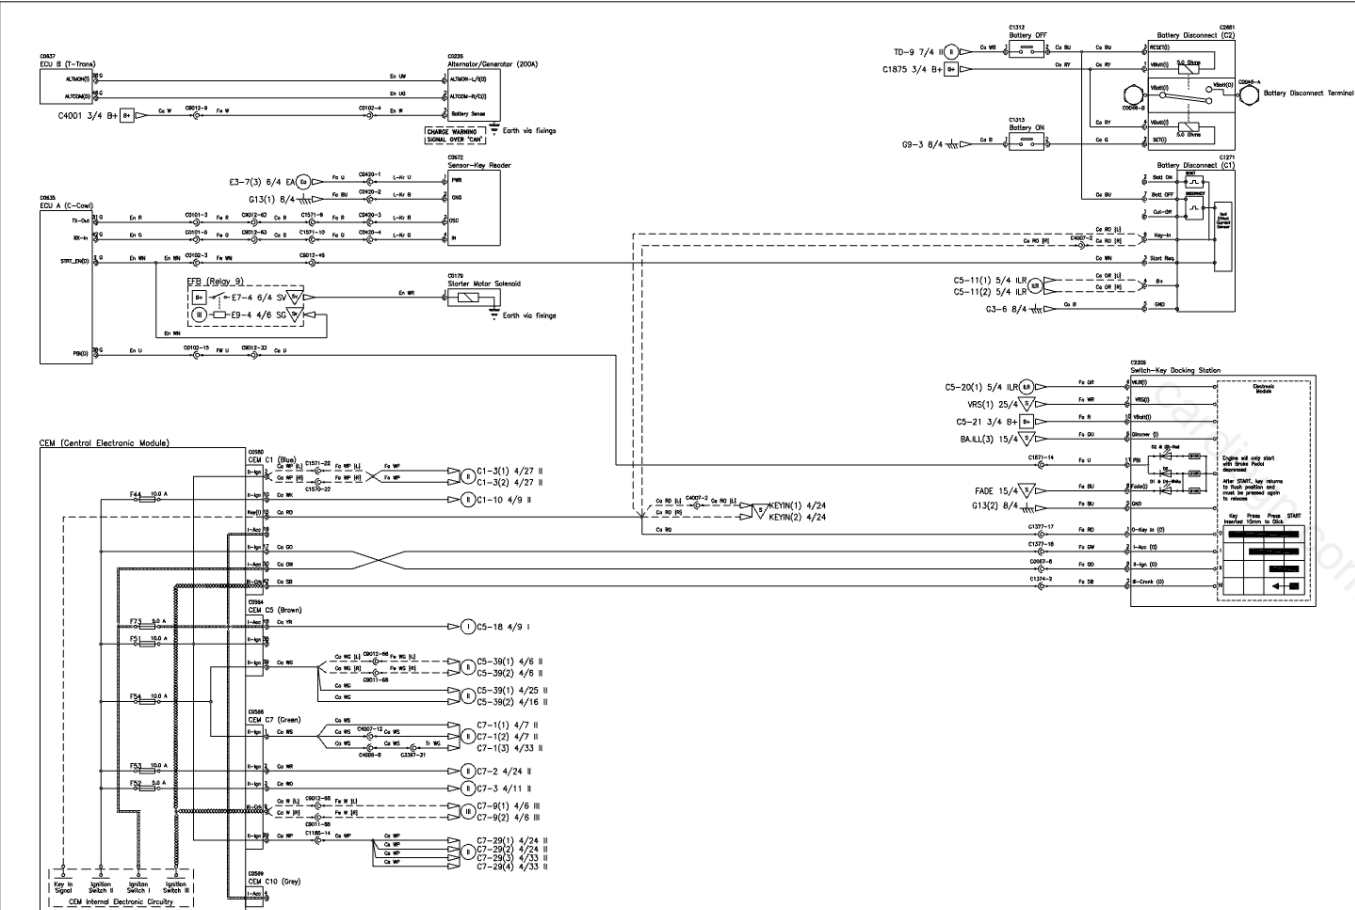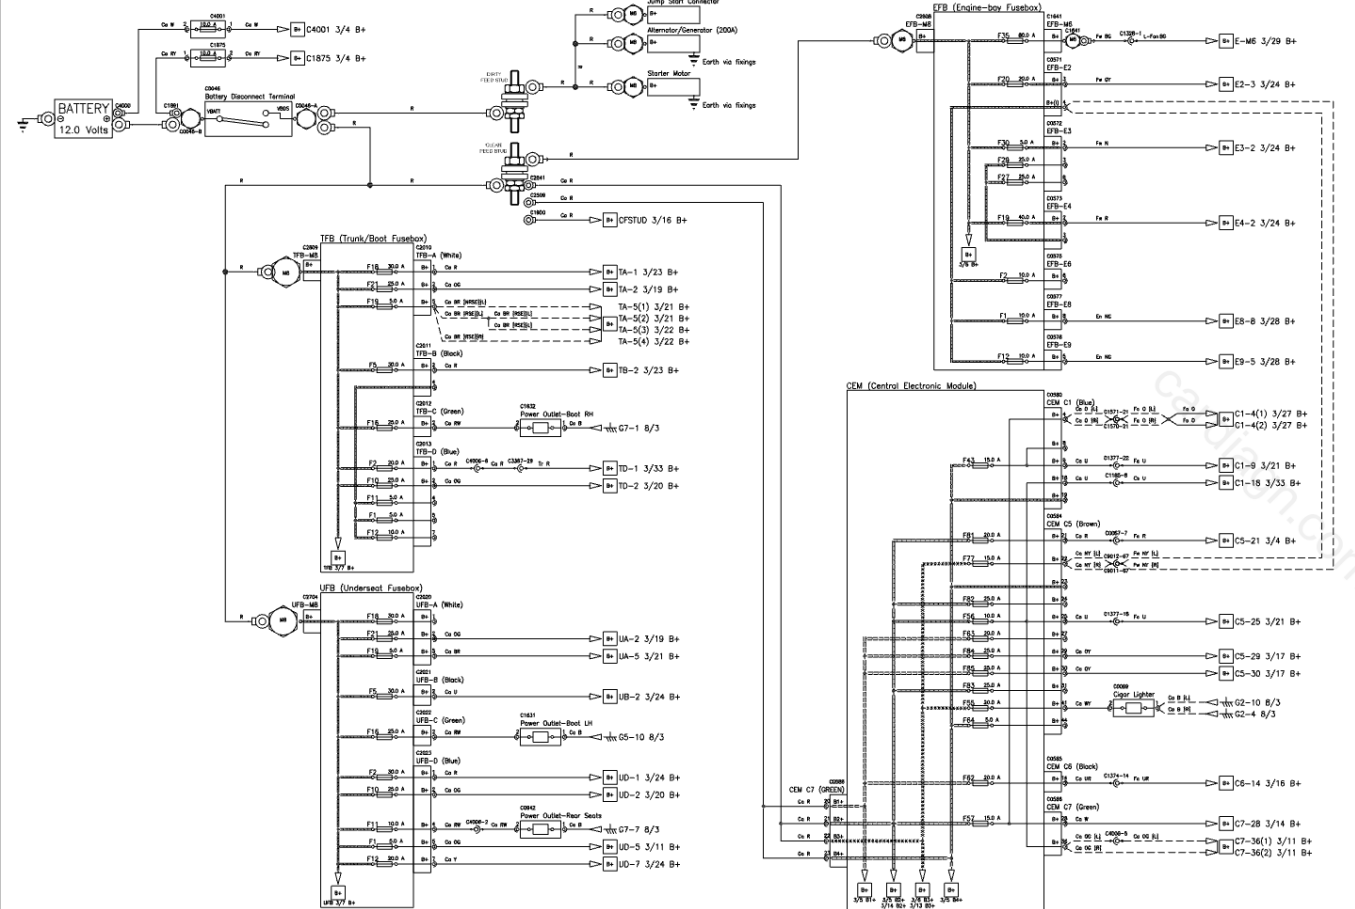

COMFORT RELAY
 ON: with key to position 8 (ignition)
 OFF: delayed 30s after Ignition OFF

INTERIOR LIGHT RELAY
 ON: with any of the following:
 Remote key activity
 Brake pedal release
 Hazard switch
 Door ajar switch change (door opened or closed)
 OFF: with either of the following:
 Delayed 10s after Remote Key "Lock"
 6-Seconds after Key Out

INFO/TAMPER RELAY
 ON: with key to position 1 (accessory)
 OFF: delayed 30s after Key Out

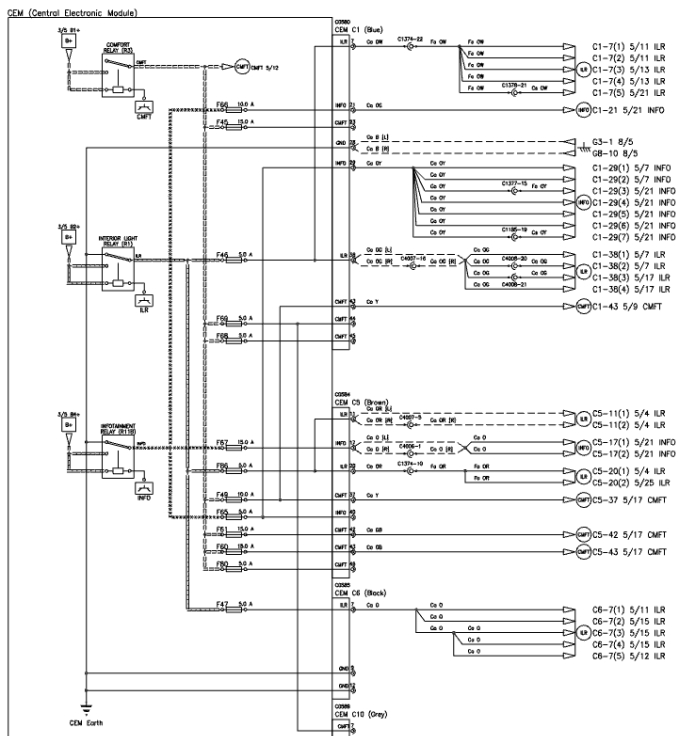

cardiagn.com



CPSC Code: 00.06.51
 Prog: Rapide
 Build: 2011MY
 TITLE: SUB-SYSTEM TITLE

CEM Ignition Relays
 ILR, INFO, CMFT

AHL DRG No. ILBD43-14T400-AA